



FIREFLY SAUNA TENT USER GUIDE



WELCOME

Congratulations on your purchase, and thank you for supporting Firefly Sauna! Please read through this entire manual to ensure proper care and use of your sauna tent.

IMPORTANT GUIDELINES

Fire Safety

01

Never leave the tent unattended. Burn only clean firewood and ensure the chimney is properly connected and sealed. Use only proper sauna rocks in your rockhopper. Do not use plastic furniture or bring otherwise flammable items into the sauna tent or near your stove. Do NOT touch stove at any point while there is an active fire / at least an hour after it has gone out.

Stove Care

02

Your stove is made of high quality stainless steel. This material allows the stove to be durable and portable. However, it is not advised to get the stove considerably wet beyond pouring water on the rocks.

Stove Seasoning (First Time Use Instructions)

03

The first time you use your stove, assemble and fire it up OUTSIDE of the tent. The first heat will burn off any chemicals from the new metal and help warp the metal into a tighter final fit. Make sure it gets hot, then let the stove cool down completely before setting up inside the tent.

Placement & Setup Considerations

04

Ensure your Tent is setup on flat ground, at least 6 feet away from buildings or other flammable objects. If there are high winds, use sandbags or the included tent stakes to secure to the ground. Never light the stove if you are unsure about the stability of either tent or stove. Do not light the stove if the chimney is not properly installed.

TENT SETUP

***Ensure you have followed proper stove seasoning instructions before using the stove inside your sauna tent.



01

Unpack & Prepare

Carefully open the boxes and remove duffel bag containing tent.

02

Lay Flat & Unfold

Take the tent out, set it on flat prepared surface, then unfold until it is laid flat.



03

Pop-Out & Secure Tent

Pop up the tent by pulling the side-wall pull straps. Then, pop up ceiling from inside. Secure with stakes.



04

Place Stove

Unfold legs and place stove beneath chimney hole. Fill top with proper sauna stones.



05

Complete Chimney

Install remaining chimney pieces and guide through stainless steel roof panel.



06

Place Firewood and Light

Place kindling and small firewood to start your fire. Add pieces, keeping the door closed and draft open until fire is rolling. Enjoy!

07

Always keep an eye on the stove with an active fire. Stoke the fire with metal stoker from time to time. Do not touch the stove or sauna rocks at any time once fire is lit. Ensure fire is out before leaving the sauna unattended. Clean ash tray after each use.



ACCESSORY RECOMMENDATIONS

01

Sauna Rocks

Ensure that you use appropriate sauna rocks. You will need 25lbs Up to 40lbs of rocks to fill the top of the stove.



02

Proper Seating

Choose any mobile & easy to assemble wooden benches. Do not place any seating within 2ft of the Stove.



Firefly Sauna Foldable Cedar Bench

03

Other

To make your sauna experience seamless, invest in a high quality bucket and ladle for steaming the rocks.



Firefly Sauna Bucket & Ladle



OTHER FAQs

01

Can I use the stove without sauna rocks?

You could use the stove without rocks, but it will not get nearly as hot inside the tent. Saunas use rocks as thermal mass to amplify the warming effects of the fire. Be careful, the rocks get hot.

02

Can I leave the sauna tent up all season?

You can leave the tent up for extended periods of time, however, you will want to leave the door or windows open to ensure proper airflow so the tent does not contain too much moisture. The roof will handle rain and snow, but heavy snowfall should be cleaned off to avoid overloading the roof.

03

How do I clean my tent & stove?

Tent: Wash with gentle soap and warm water.
Stove: Wipe down with a wet cloth.

Only clean these products when not in use, never while a fire is burning or stove is still hot.

05

What should I use for flooring?

You can set up without flooring anywhere you might set up a grill, but be sure nothing flammable, including dry grass is underneath. Pavement, on your deck, or the grass is all fine. Just keep in mind, whatever's below the stove could melt or set fire. If you want a nice wood build, try untreated 6x8' fence panels.

06

Return Policy

You have 30 days upon receipt of your product to request a refund or exchange. We will not accept opened units with otherwise visible evidence of use.



THANK YOU!

We hope you enjoy your sauna experience! Be sure to tag us on social and don't hesitate to reach out with questions.

info@fireflysauna.com
www.fireflysauna.com
